

FUNCTION

	啟動方式	過電壓偵測	低電壓偵測	過電流偵測	堵轉保護	自然停止	電子煞車	Alarm
L13031	IO / PWM	●	●	●	●	●		●
L13032	VR	●	●	●	●	●		●
L13033	IO / PWM		●		●	●	●	
L13034	VR		●		●	●	●	